


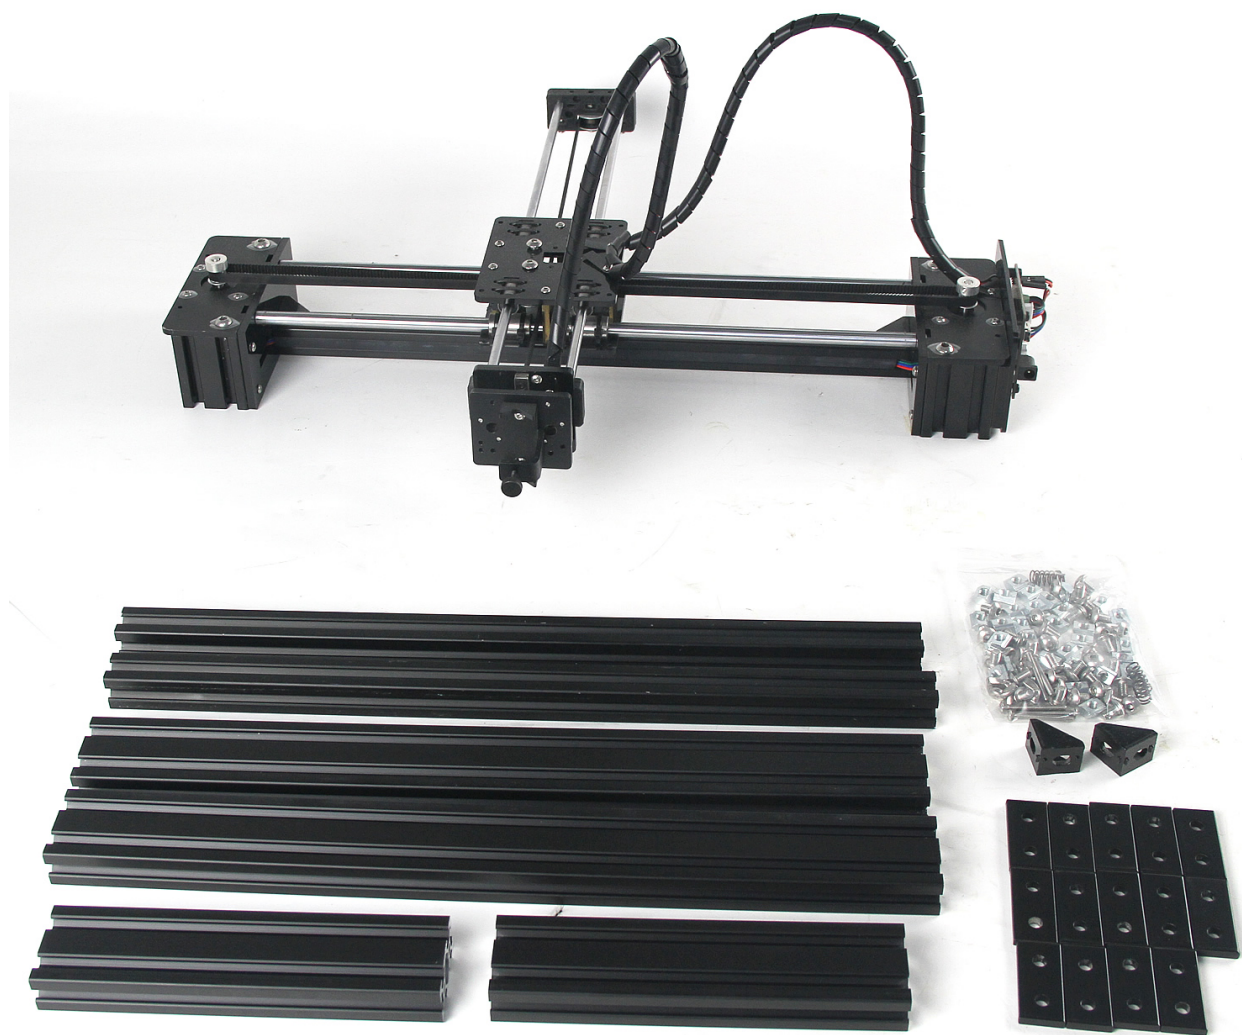
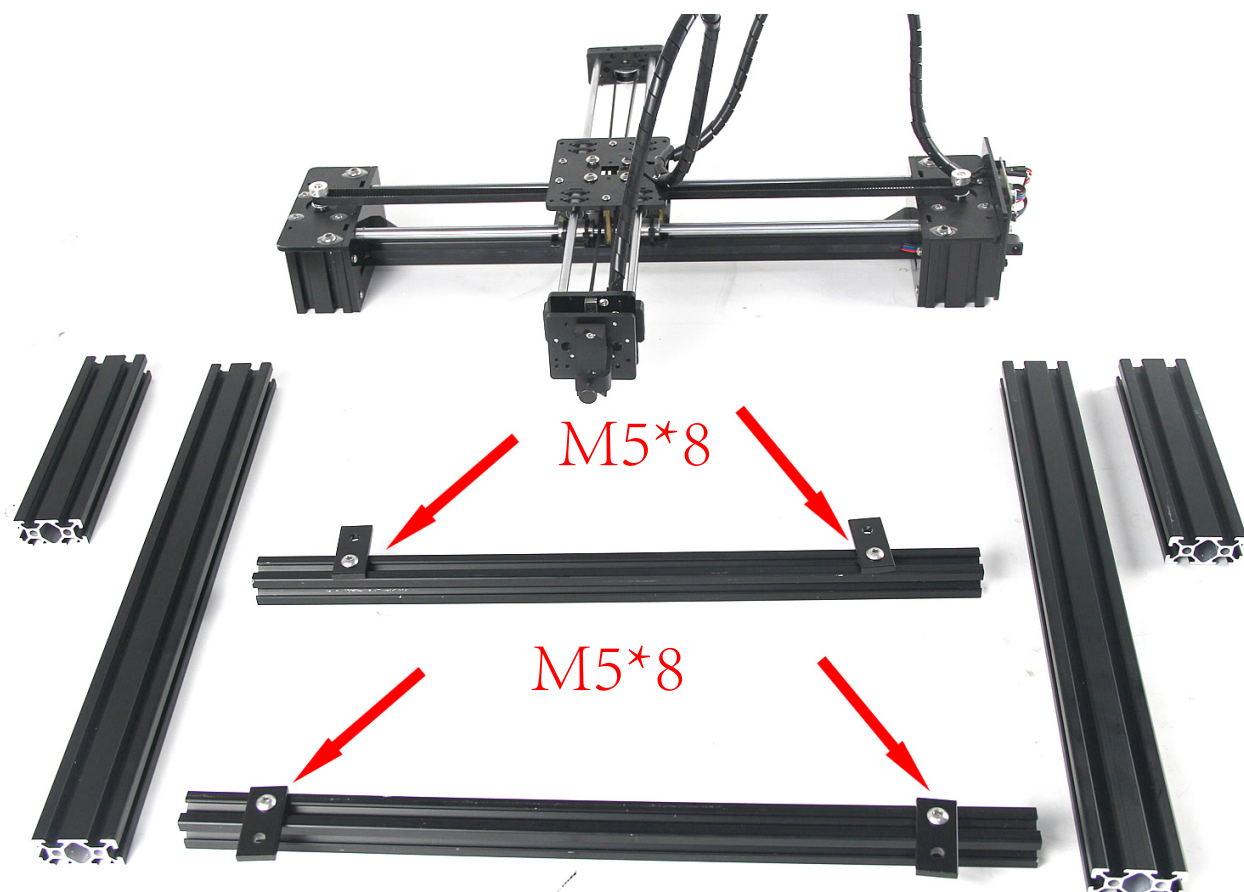




Assembly manual



组装说明

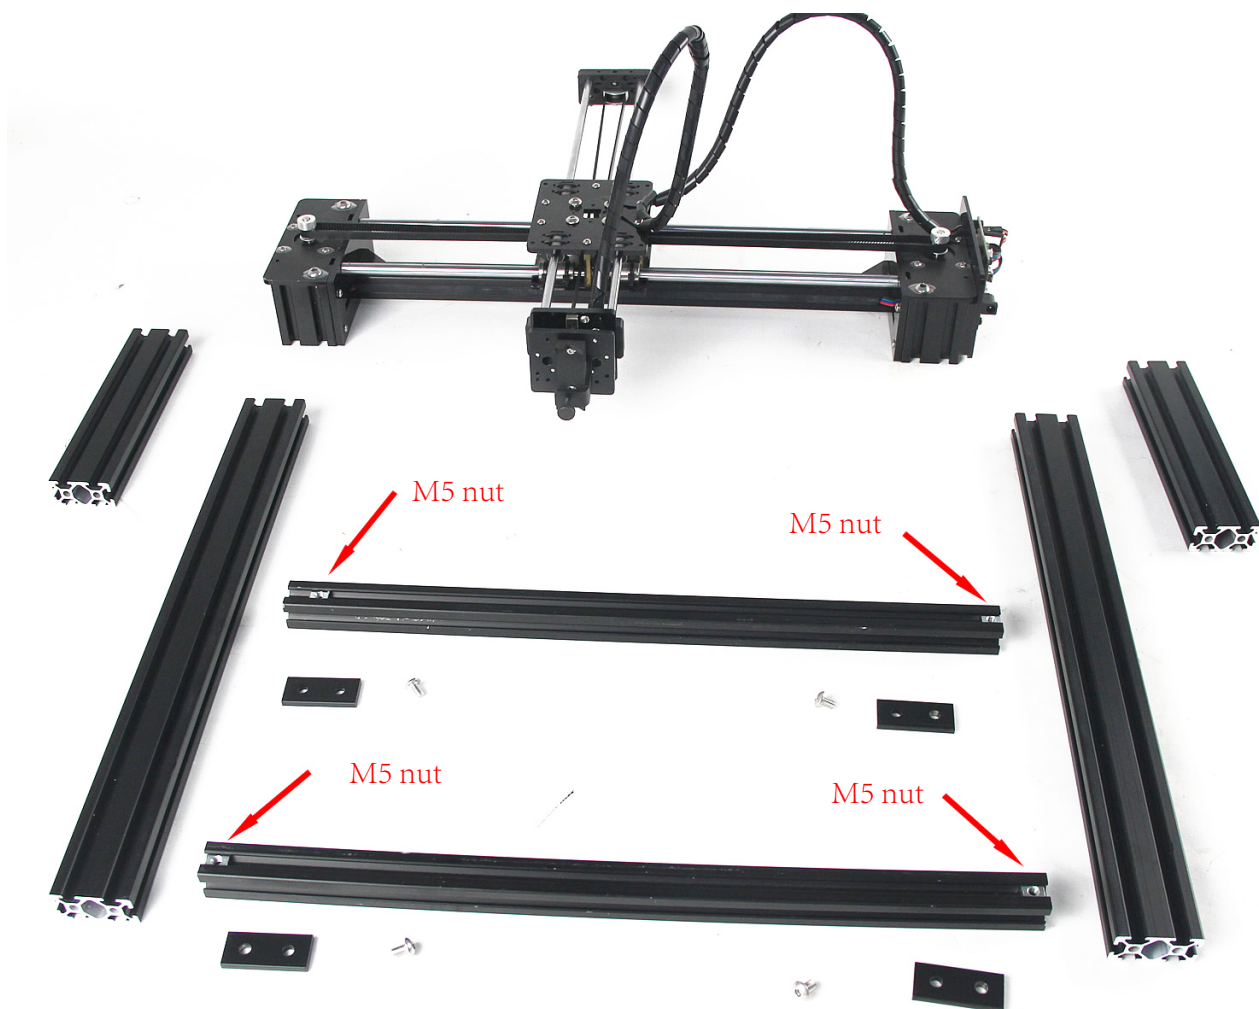



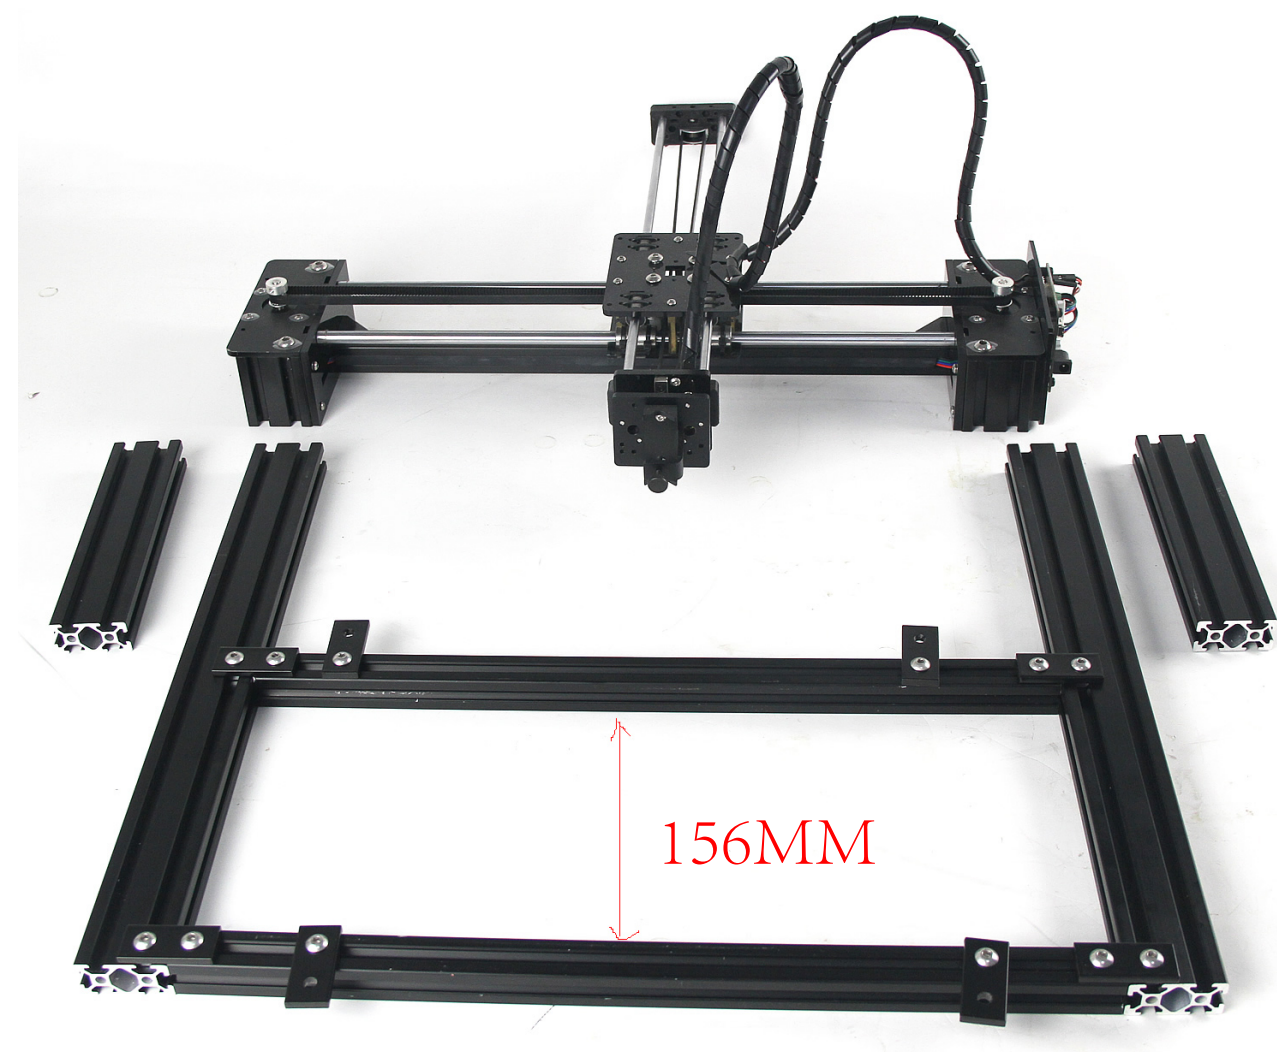



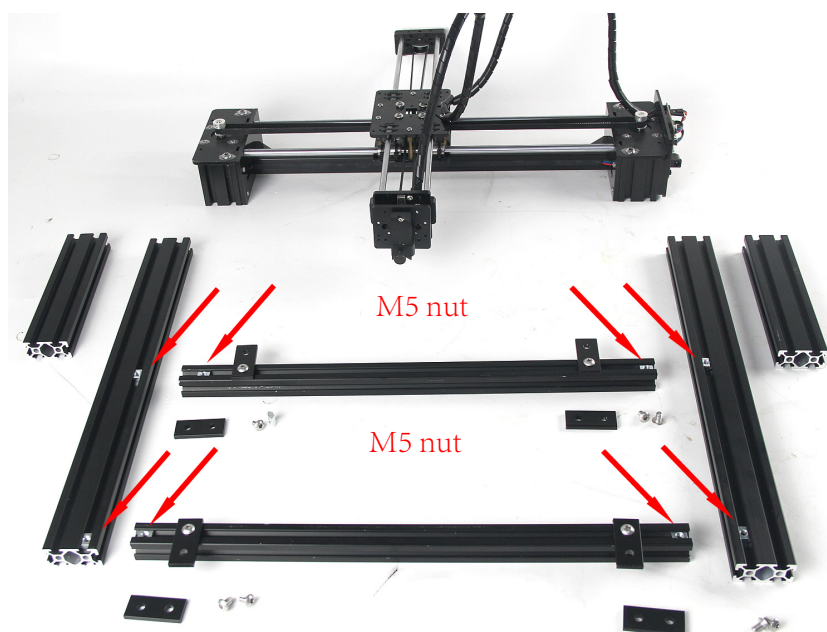


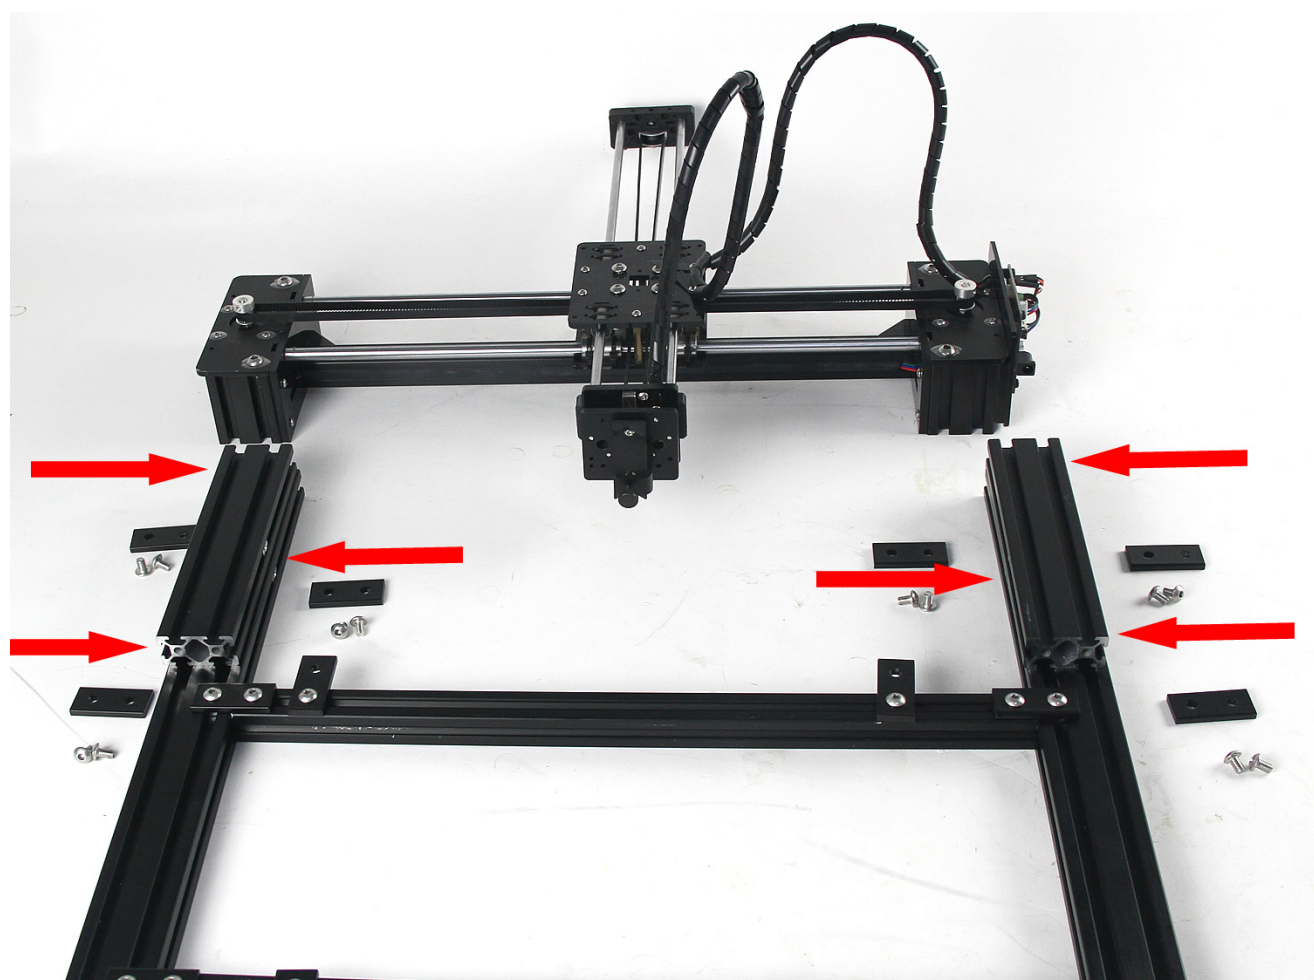
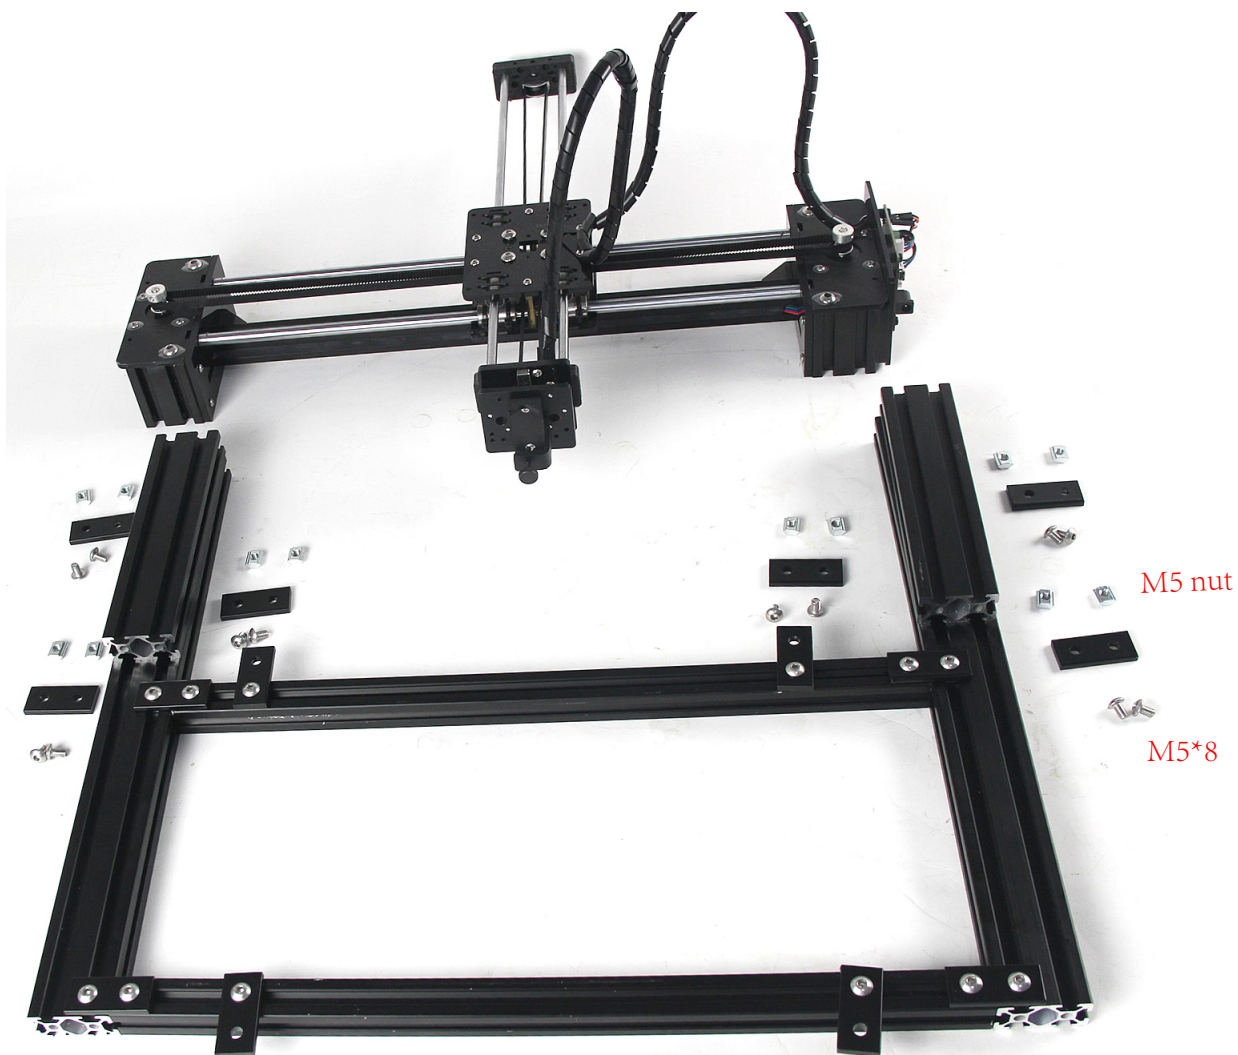


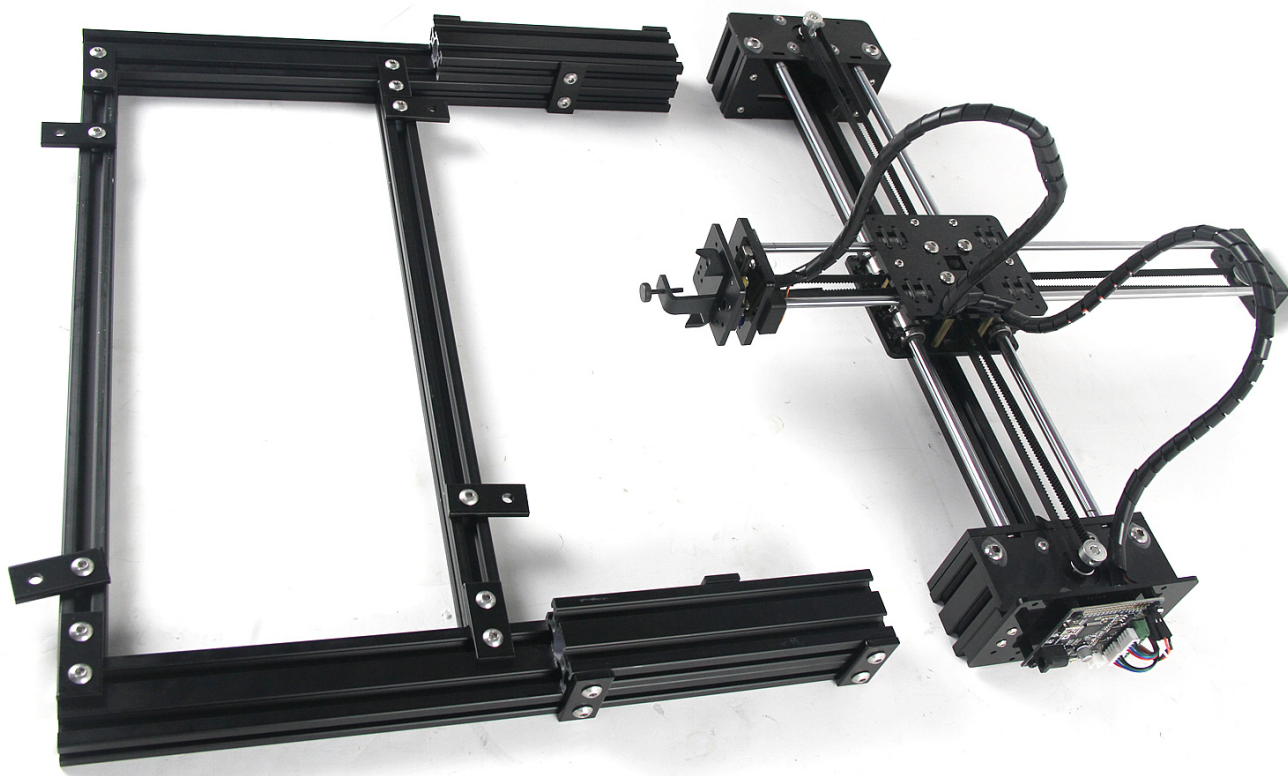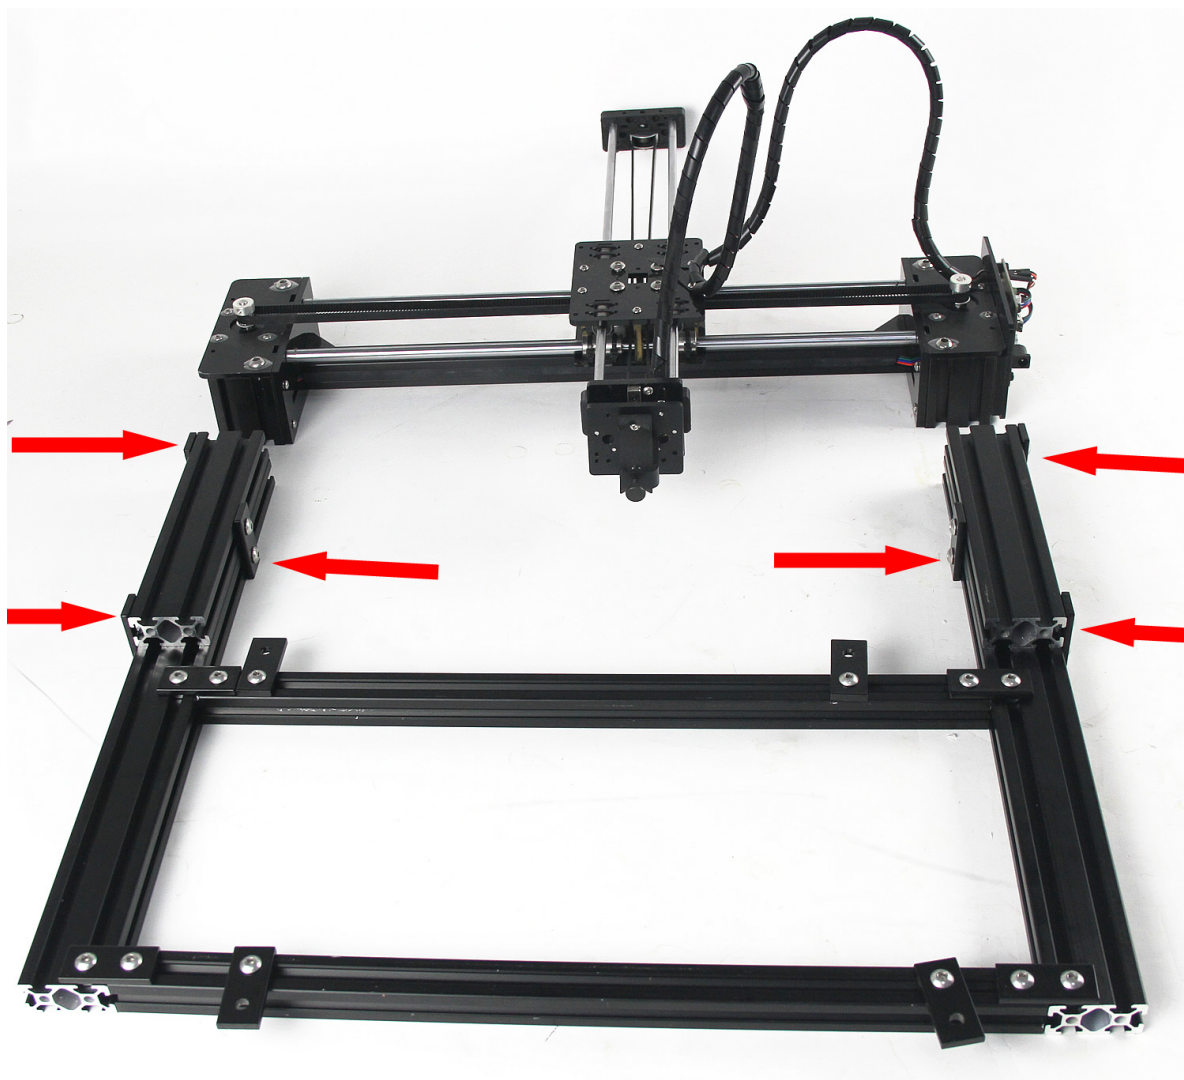



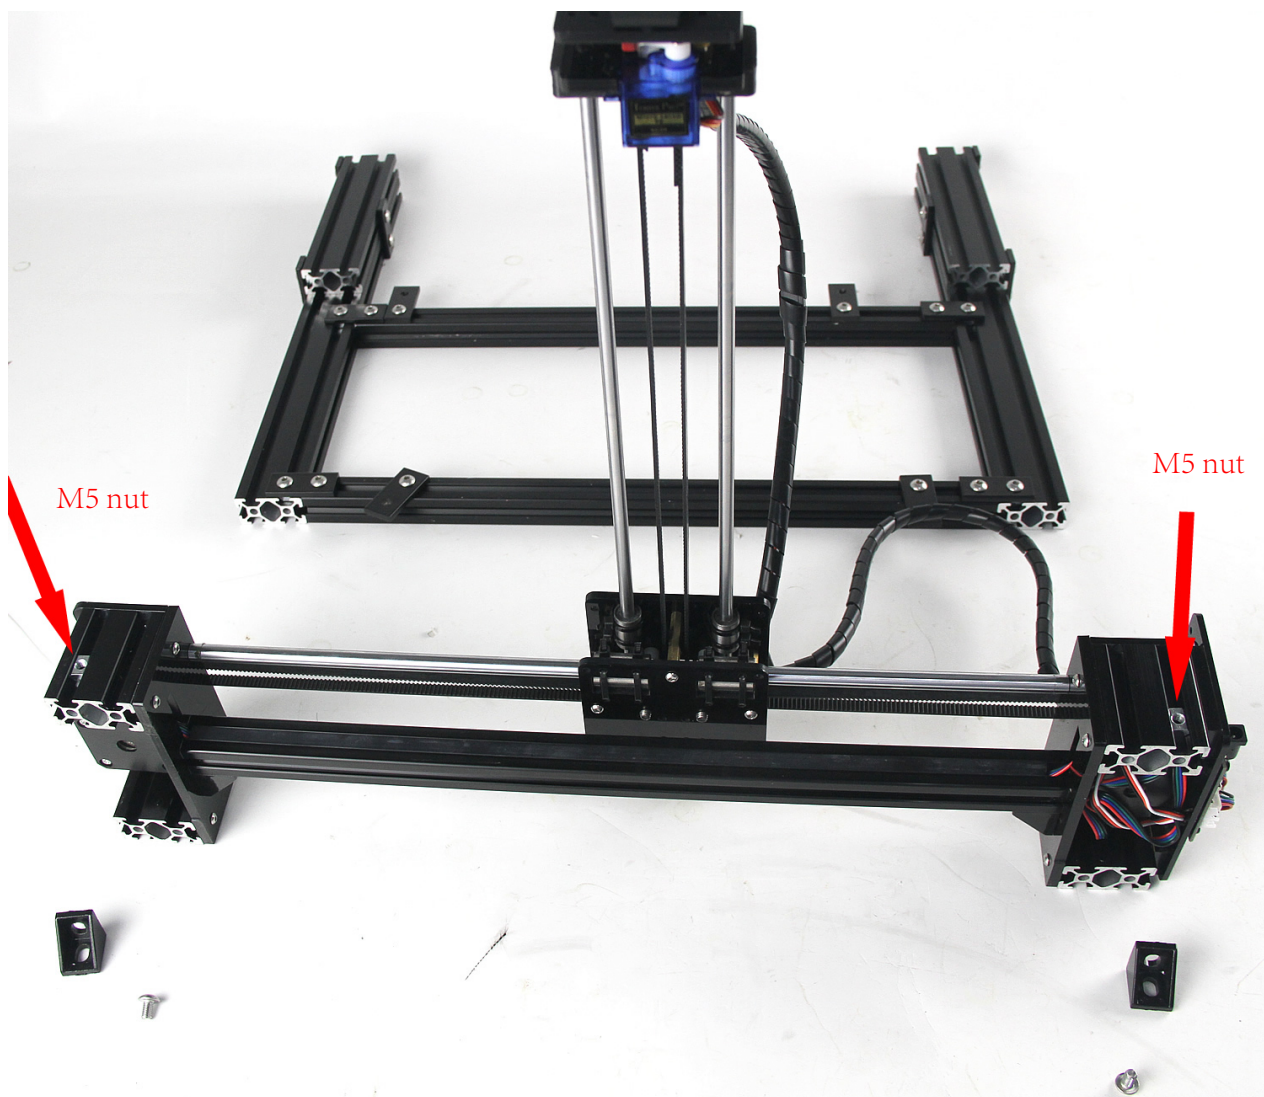


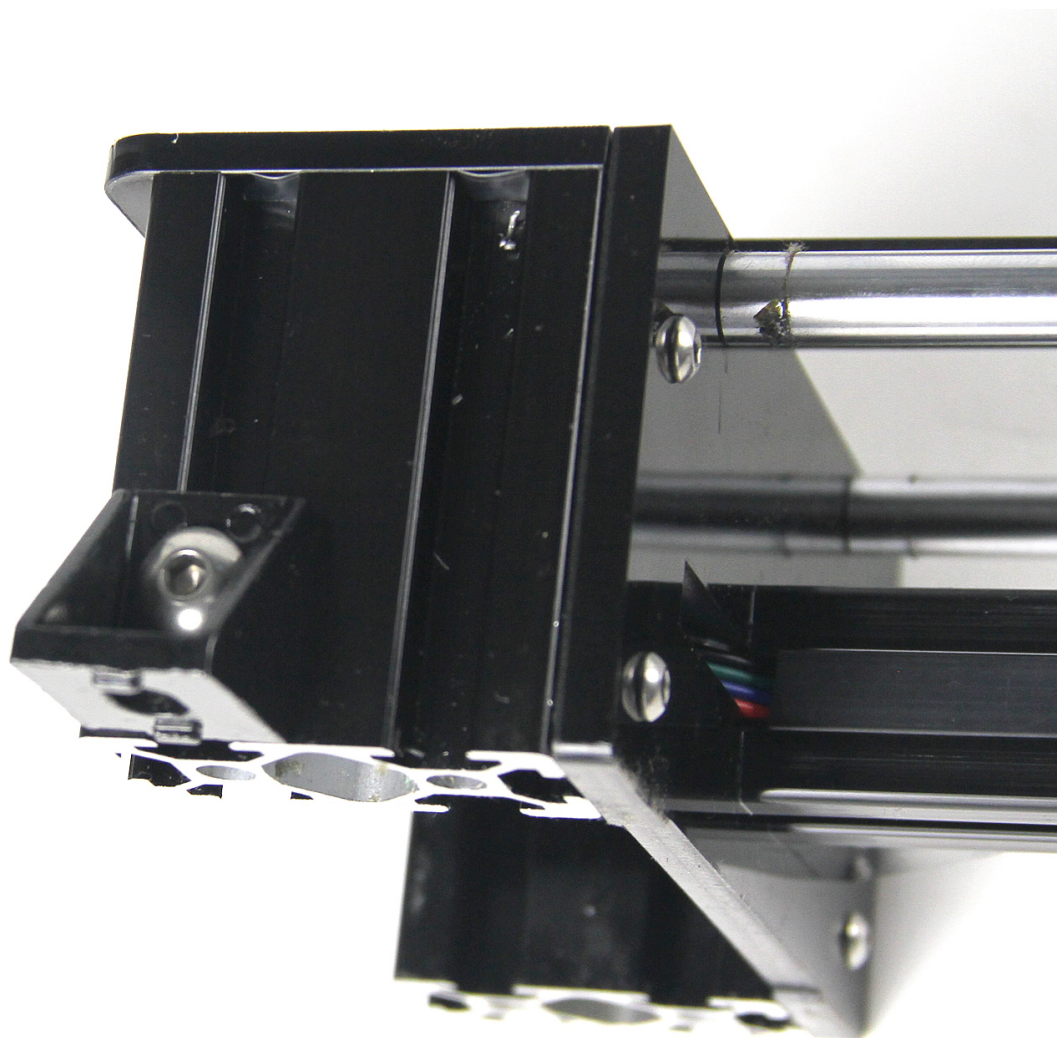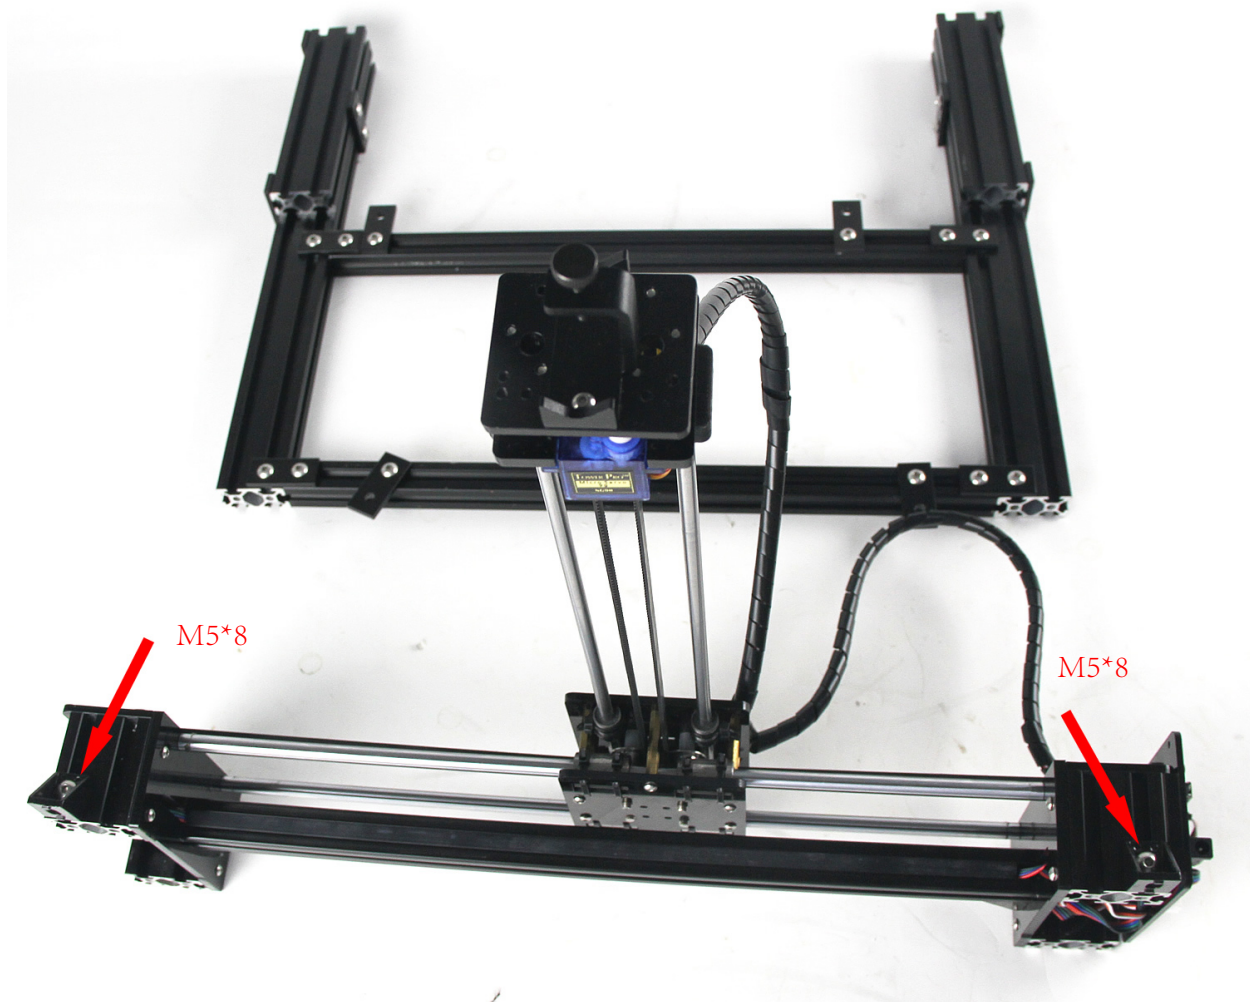

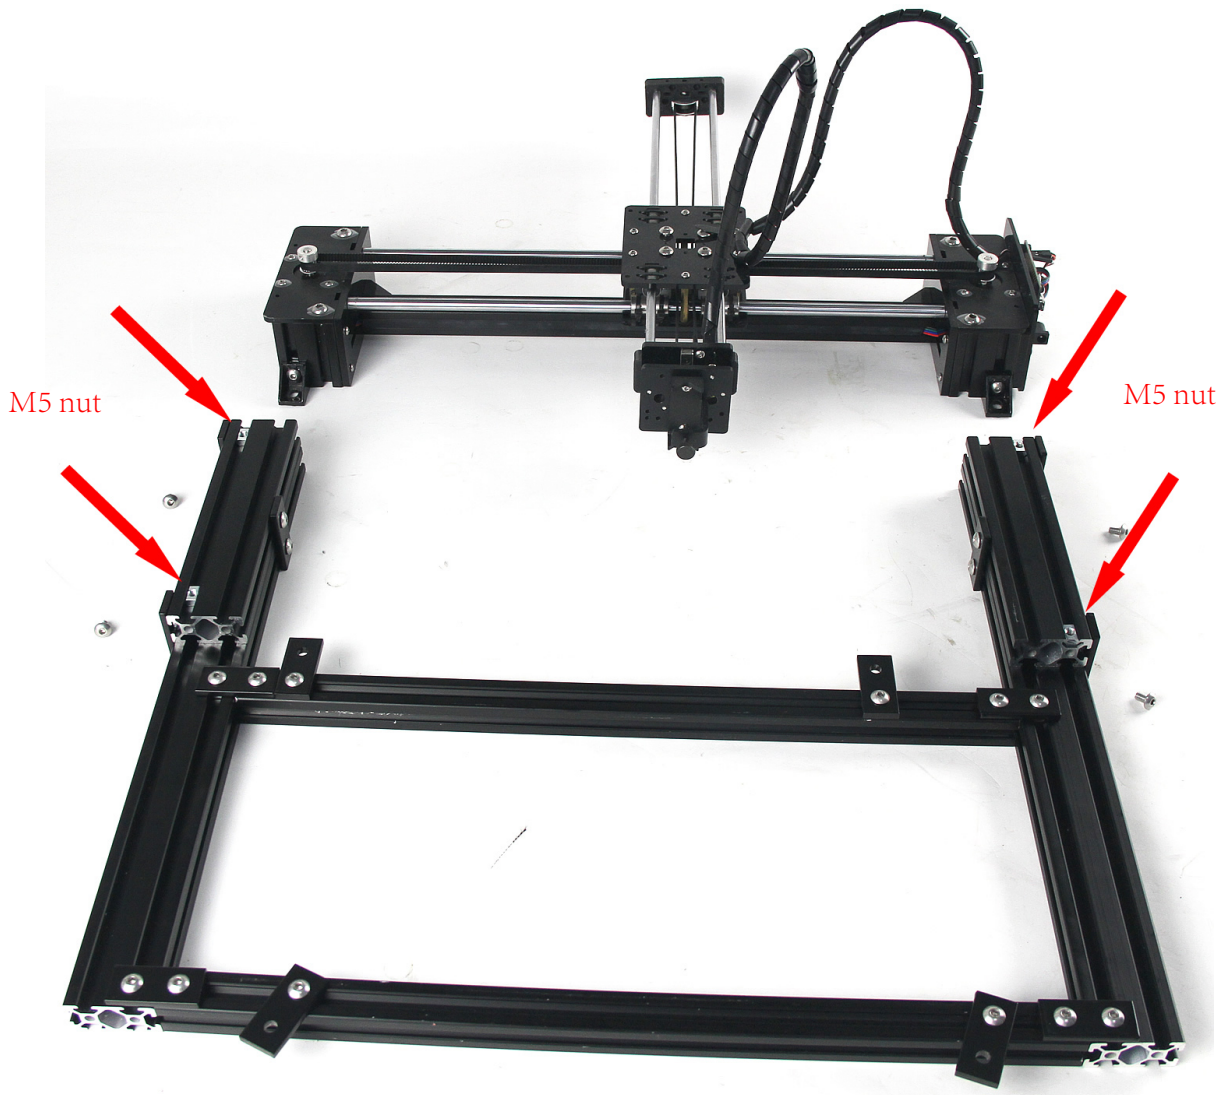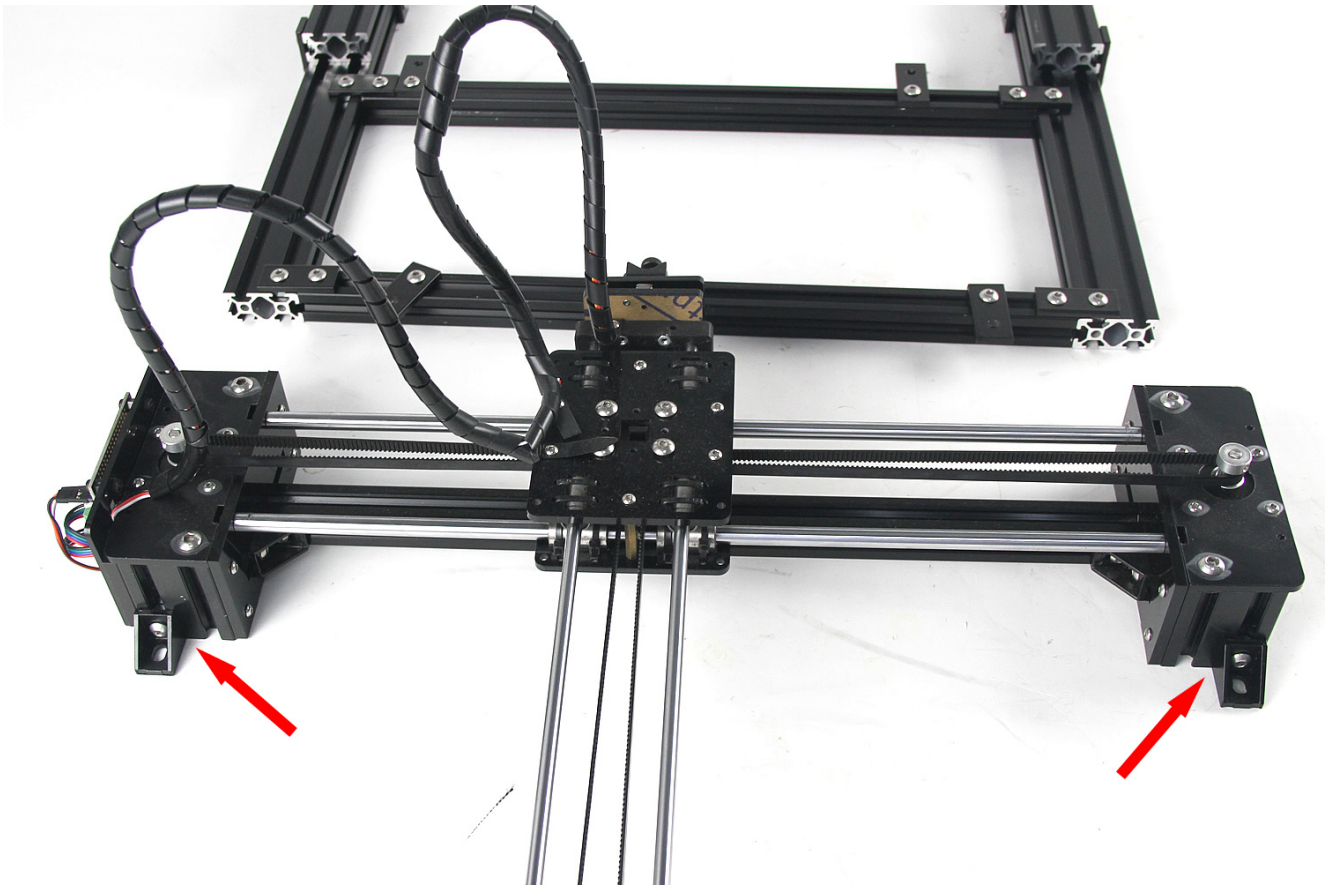

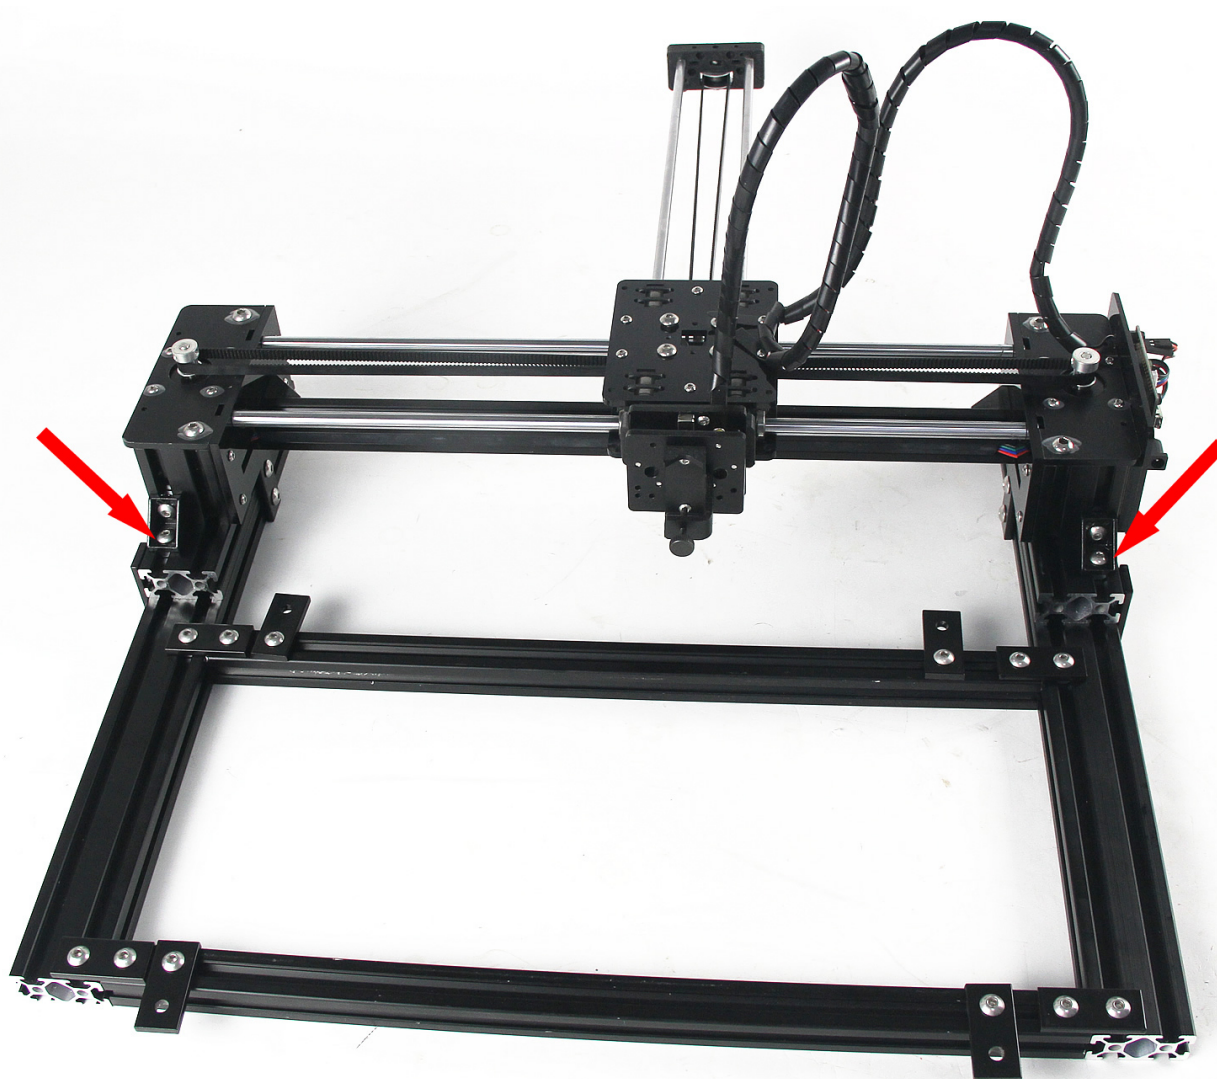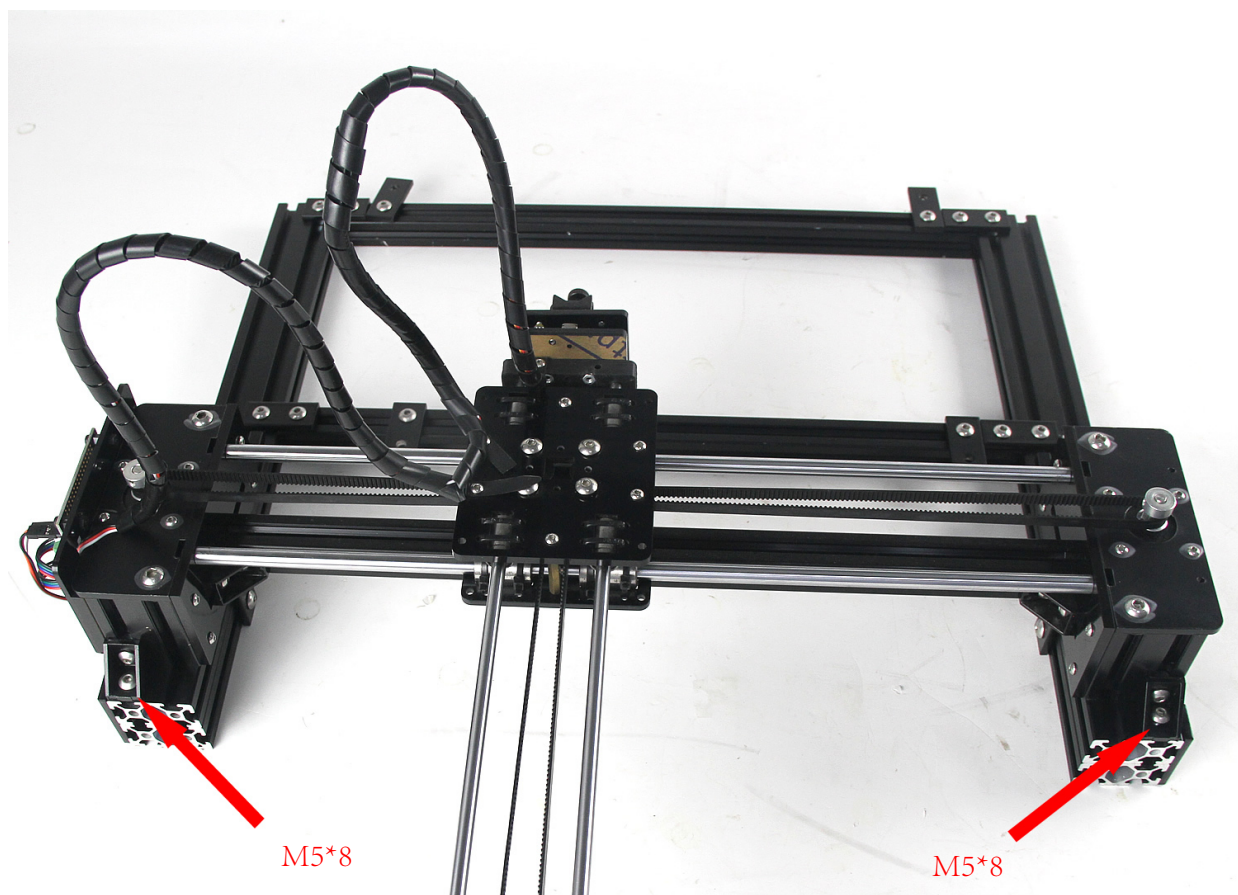

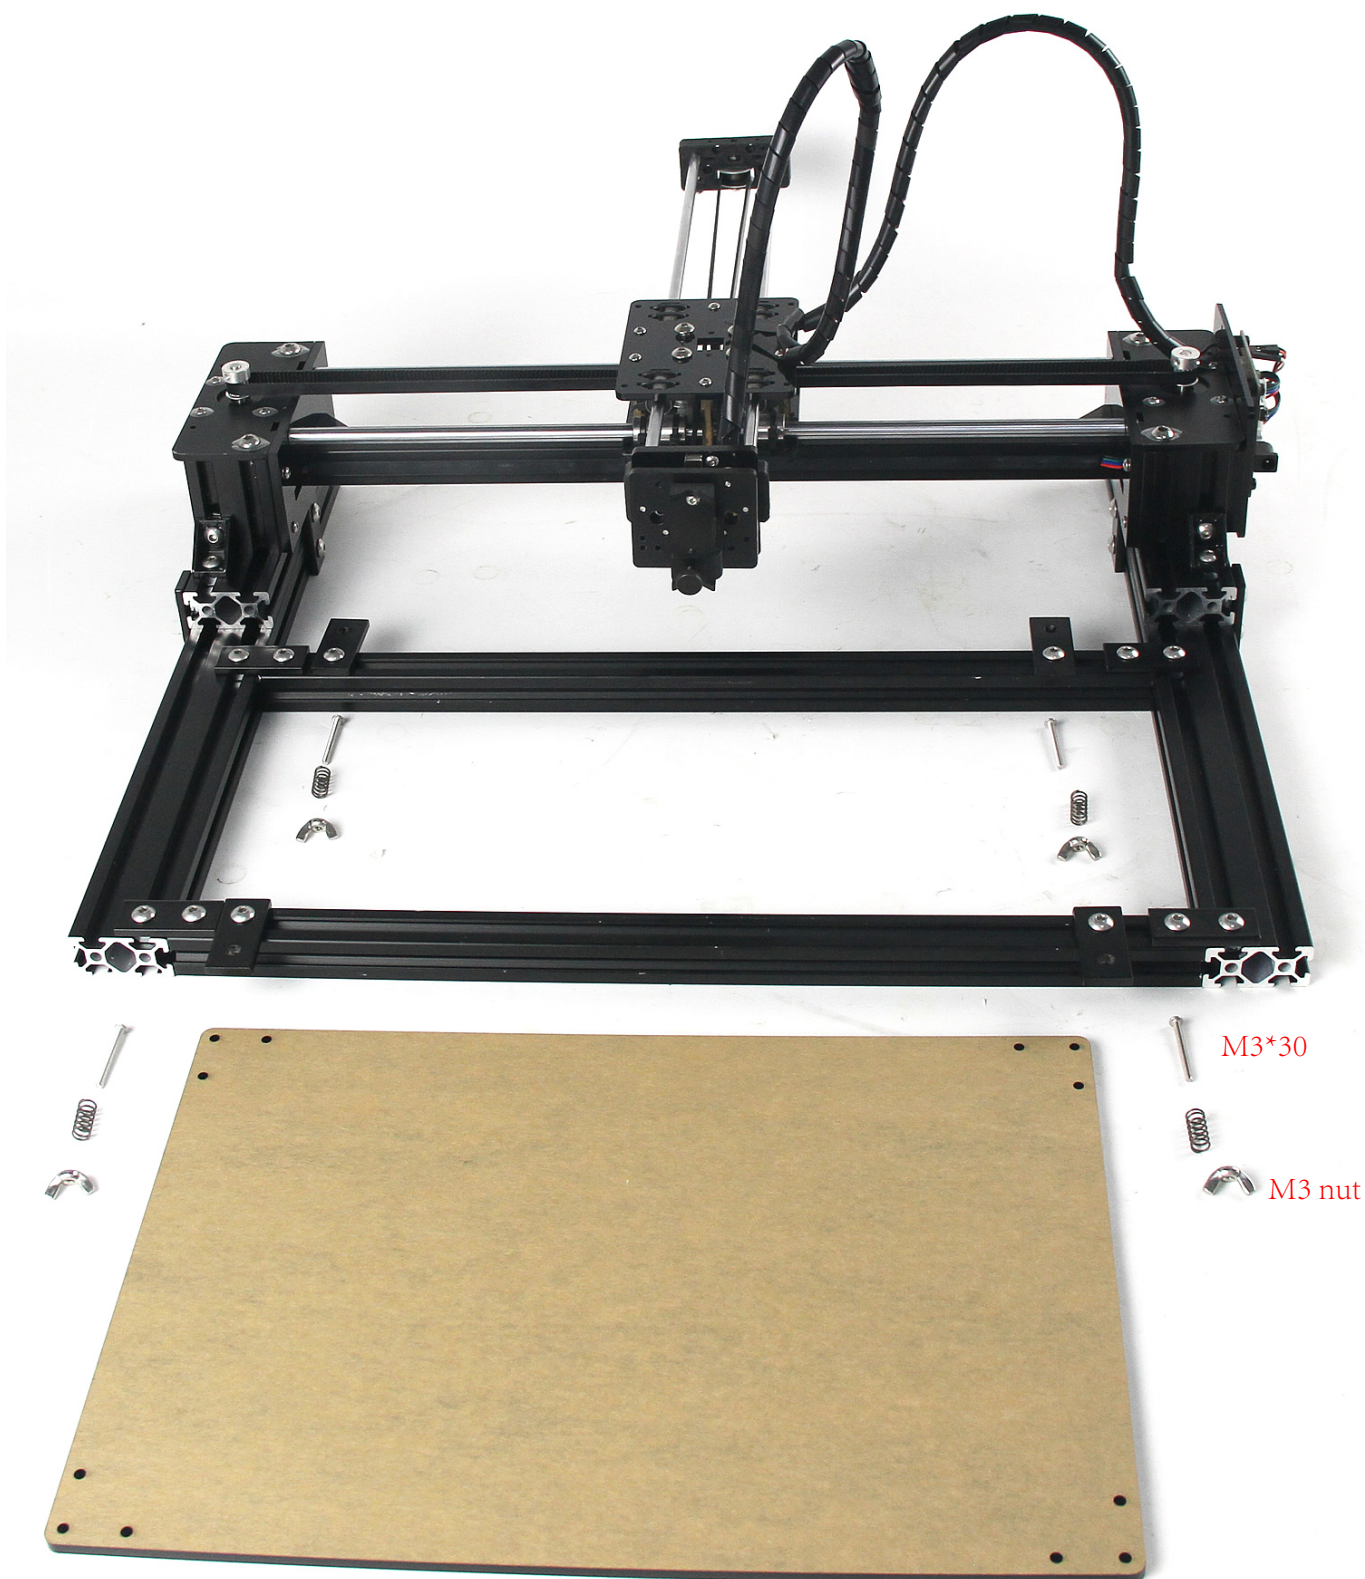


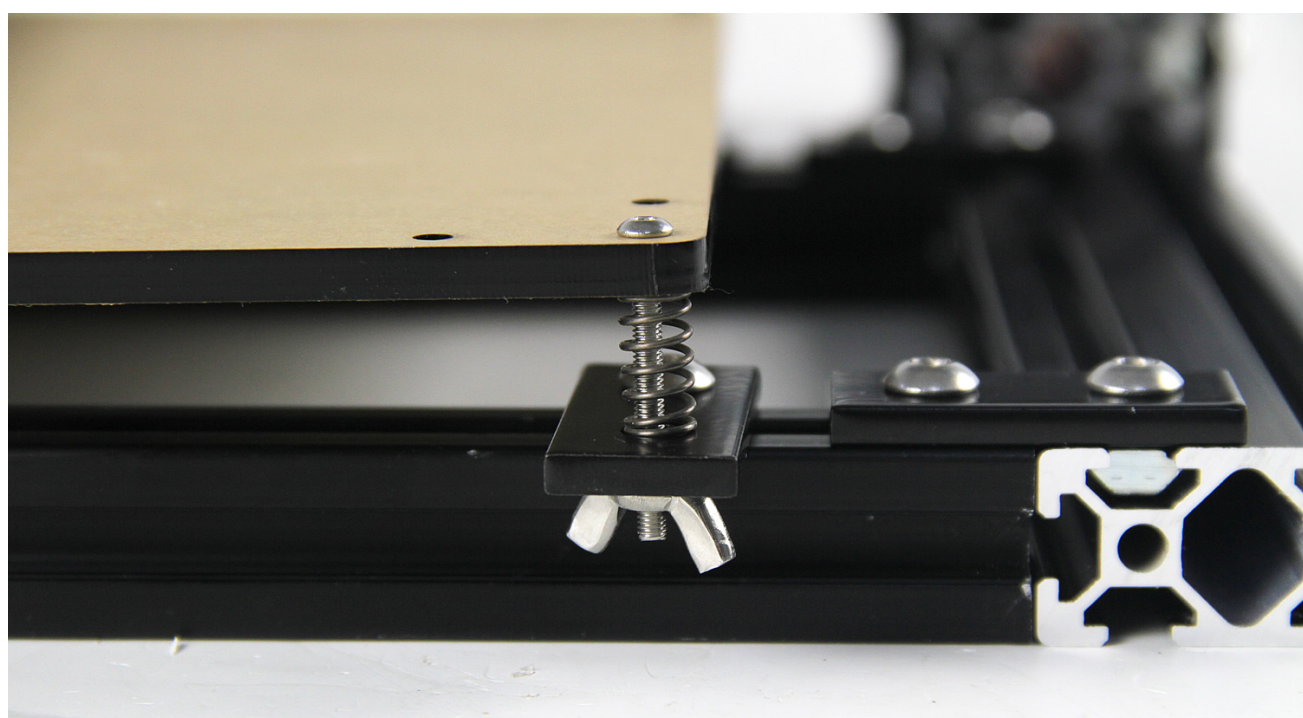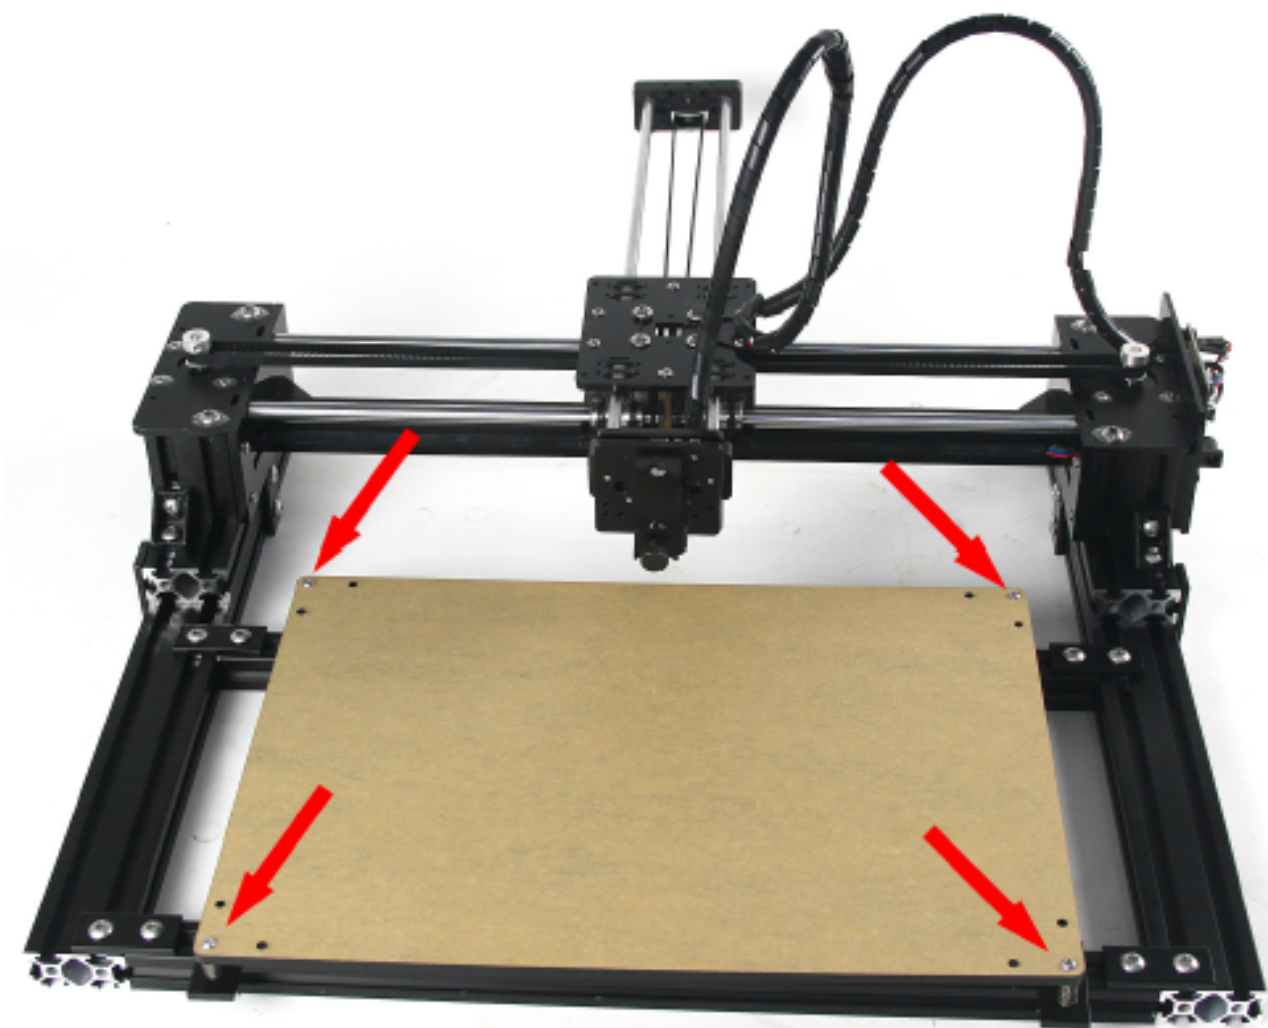


Leveling the board by “A B C D”


通过 A B C D 4点调平底板。

Let the nib just touch the board
让笔尖刚好接触到板子

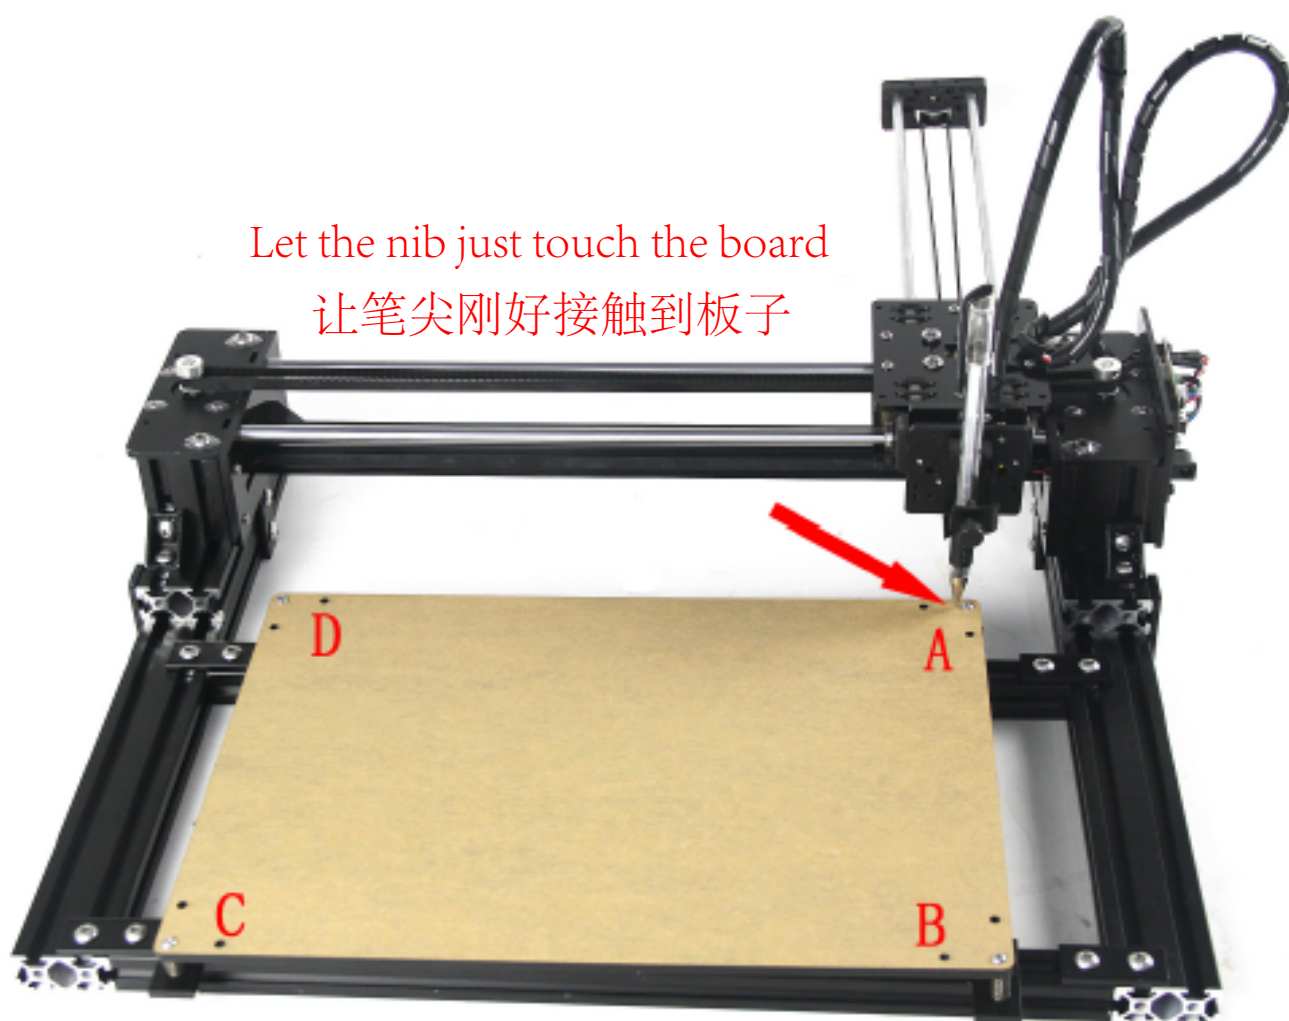

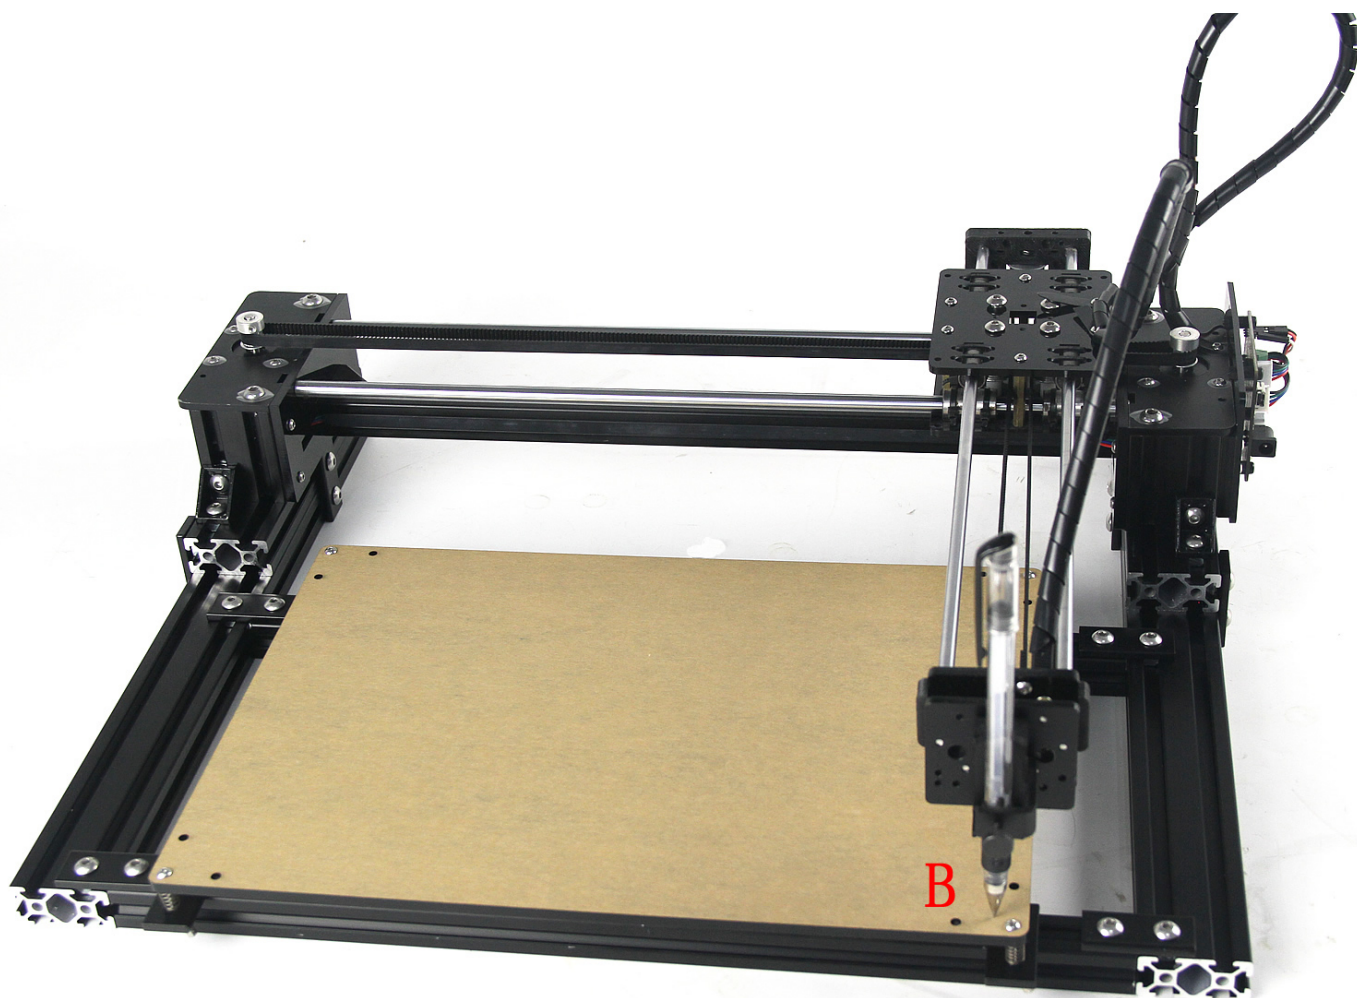


move nib to B by hand
用手移动笔尖到B点

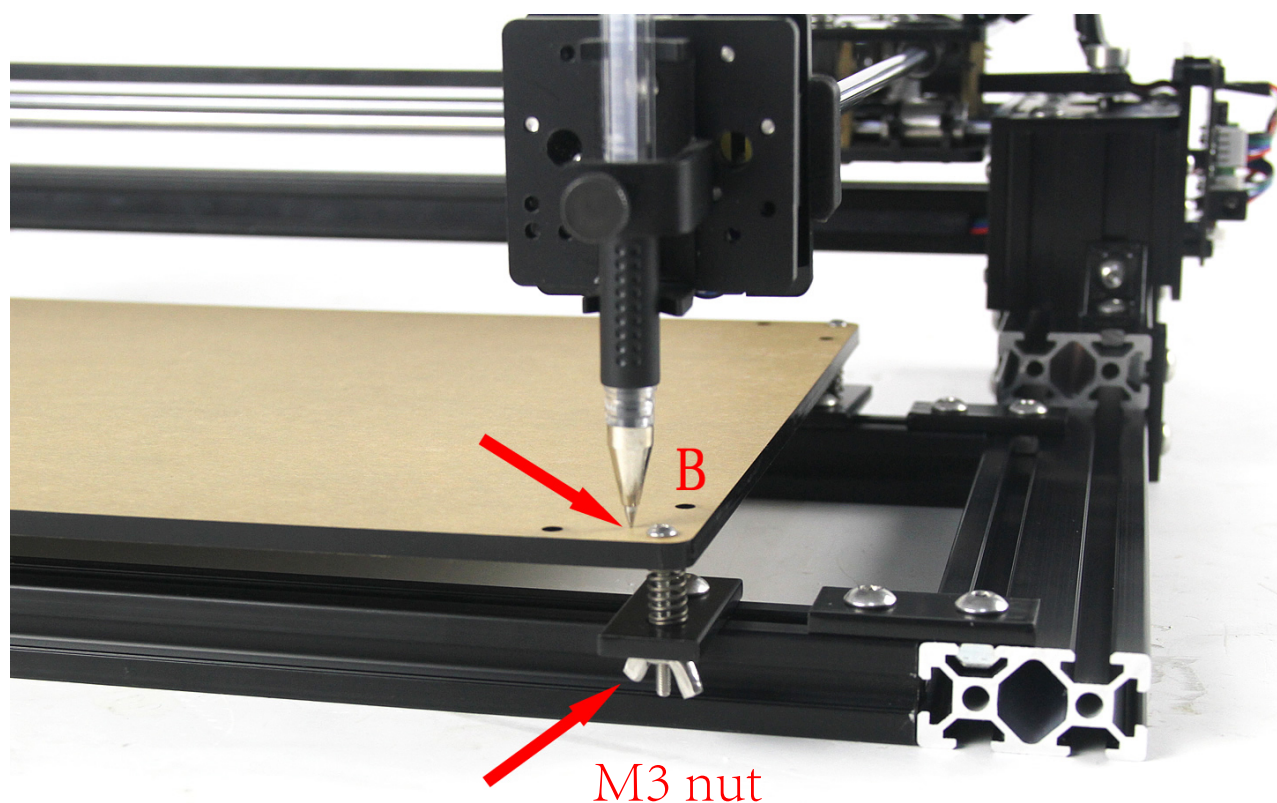

Let the nib just touch the board by rotating the M3 nut.
通过旋转M3螺母，让笔尖刚好接触到板子

move nib to C by hand

用手移动笔尖到C点

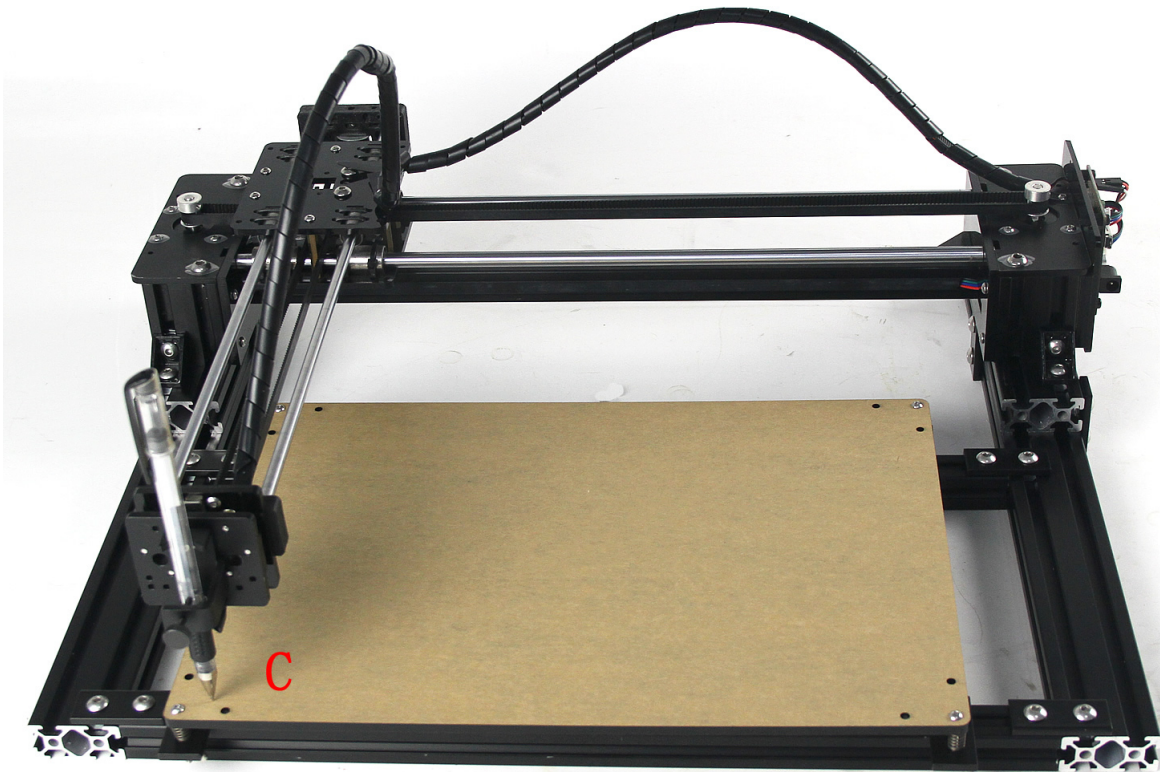


Let the nib just touch the board by rotating the M3 nut.

通过旋转M3螺母，让笔尖刚好接触到板子

move nib to D by hand

用手移动笔尖到D点

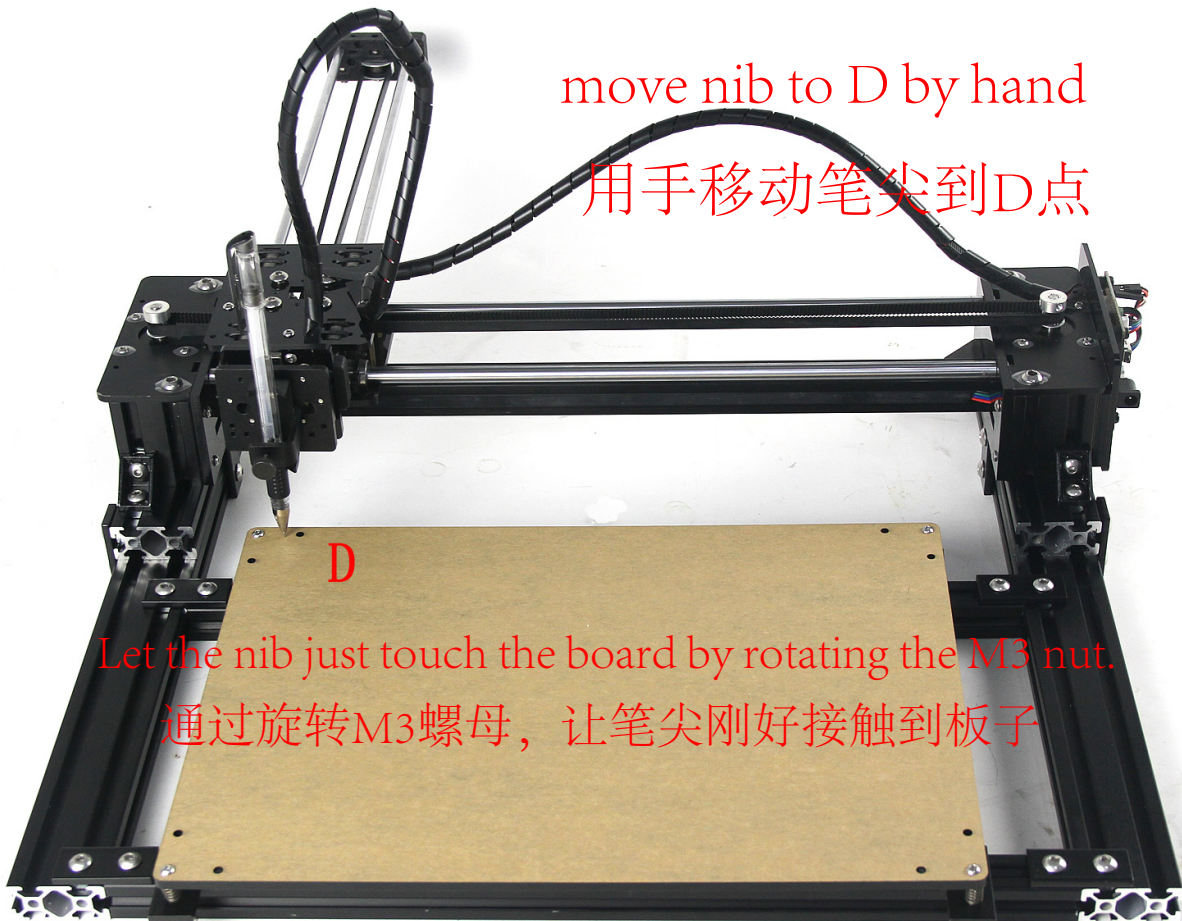

Let the nib just touch the board by rotating the M3 nut.

通过旋转M3螺母，让笔尖刚好接触到板子

